

Assembly Instruction

IMS CONNECTOR SYSTEMS GmbH
Obere Hauptstrasse 30
D-79843 Löffingen
Postfach 1141
D-79840 Löffingen

Tel (+49) 7654 901-0
Fax (+49) 7654 901-199
Net: www.imscs.com
E-mail: sales@imscs.com

Number: M-186


Date: 19.07.05

Description: Cable mount angle plug / jack

Signature: R.Schwär


Page: 1 of 1

Using parts:

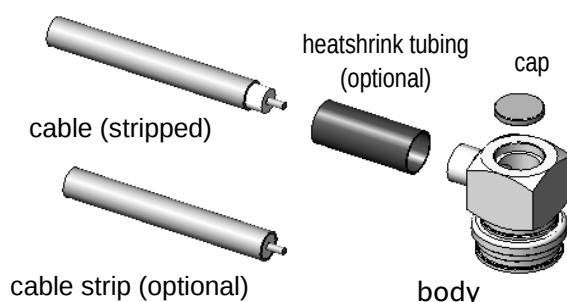


1.) Slide the heatshrink tubing (opt.) onto the cable.


2.) Push the cable in the body until final stop.

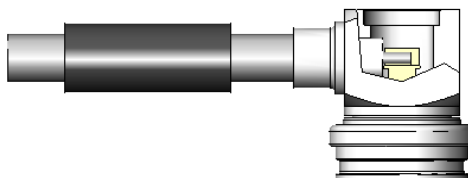

3.) Solder inner and outer contact.

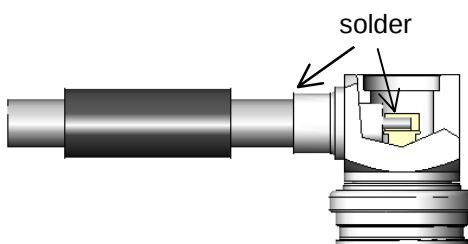

4.) Press in the cap to mechanical end stop.

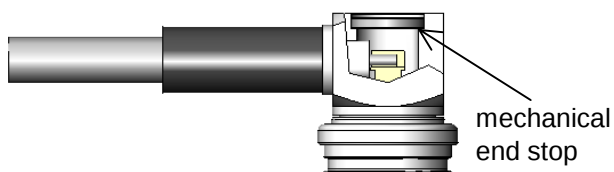

5.) Slide the optional heatshrink tubing over the crimp ferrule and heatshrink it in place.