


Assembly Instruction

IMS CONNECTOR SYSTEMS GmbH
Obere Hauptstrasse 30
D-79843 Löffingen
Postfach 1141
D-79840 Löffingen

Tel (+49) 7654 901-0
Fax (+49) 7654 901-199
Net: www.imscs.com
E-mail: sales@imscs.com


Number: M-187	Date: 15.07.05
Description: Cable mount plug / jack	Signature: R.Schwär
	Page: 1 of 1

Using parts:

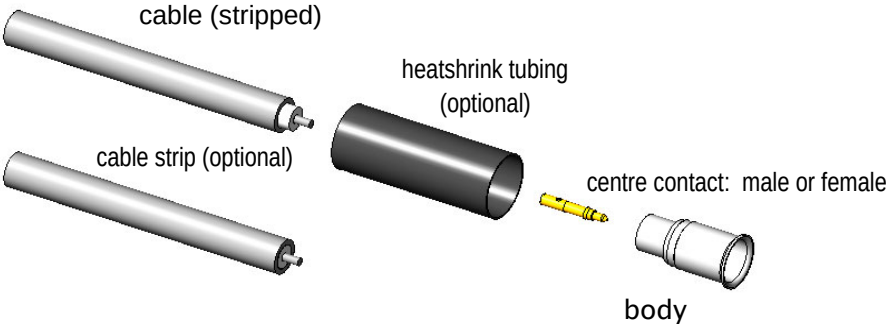

1.) Slide onto the cable heatshrink tubing (opt.)

2.) Slide the centre contact on, until it bottoms against the cable dielectric and solder the centre contact.

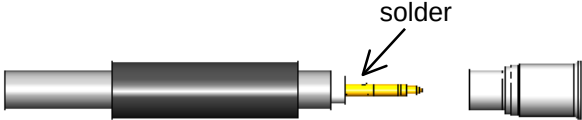

3.) Push the cable with soldered centre contact until finale stop.



4.) Solder the connector in place.



5.) Slide the optional heatshrink tubing over the soldered connector and heatshrink it in place.

