For the part number 5552.NEX.1410.075 please use the cable stripping on the outline drawing.

Assembly Instruction

IMS CONNECTOR SYSTEMS GmbH
Obere Hauptstrasse 30
D-79843 Löffingen
Postfach 1141
D-79840 Löffingen

Tel (+49) 7654 901-0
Fax (+49) 7654 901-199
Net: www.imscs.com
E-mail: sales@imscs.com

Number:	**M-286**	Date:	**26.09.2019**
Description:	**Cable mount plug**	Signature:	**R. Schwär**
		Page:	1 of 1

Using parts:

1.) Slide the centre contact on until it bottoms against the cable dielectric and solder the centre contact.

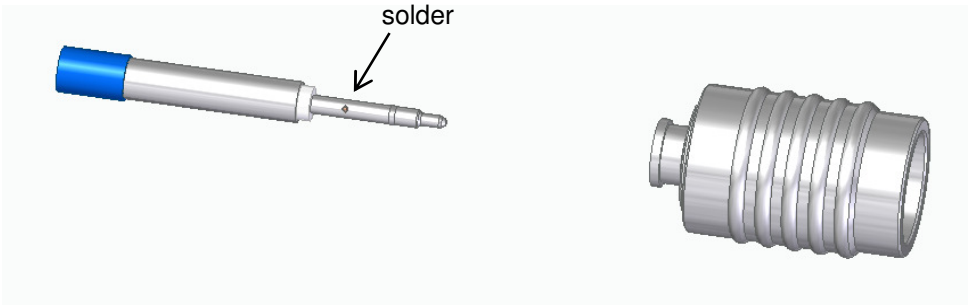
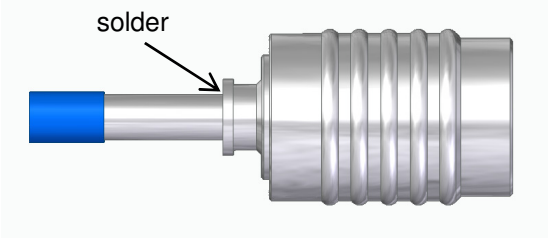
3.) Slide the cable into the body and solder the body.